

## 28mm Clamp Tool Adjustment Instructions


1. Open the tool and remove the screw.



2. Lift the adjuster and rotate clockwise by 1 notch.



3. Replace the screw.

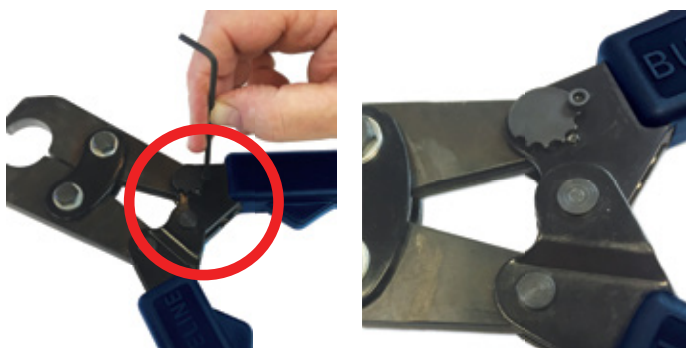

4. Check for correct clamp width.

