


BUTE Brazing Tails

Assembly & Installation Instructions

1. Remove BUTE clamp ring from brass body.
2. Braze the tail onto the copper pipe.
3. Ensure no residual flux remains on the tail section.
4. Let the brass fitting cool completely.
5. Push the BUTE clamp ring back onto the tail with force until flush to the positioning shoulder.
(as shown below)

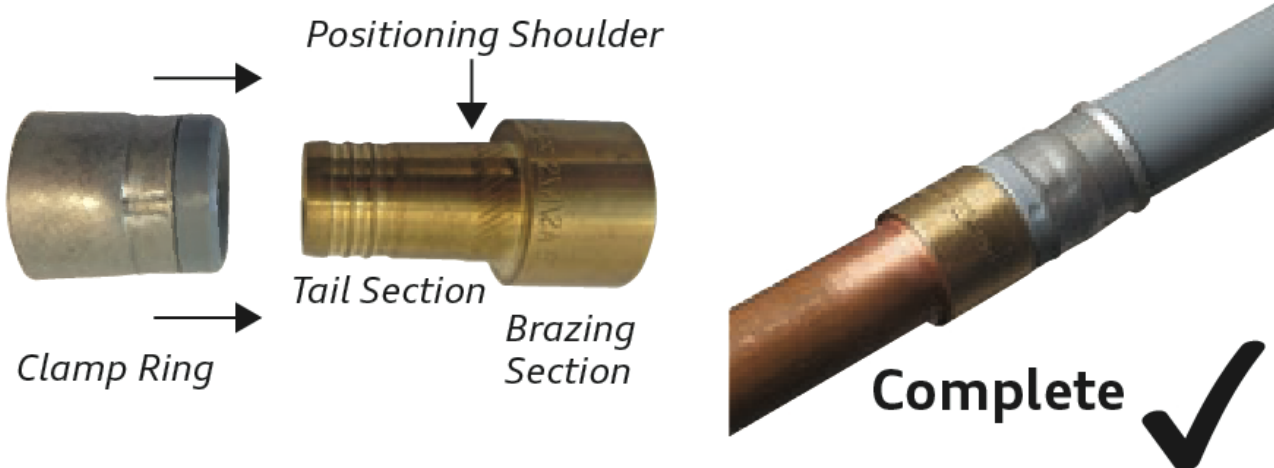

6. Clamp Buteline tail in accordance with Buteline Plumbers Manual.